

## HeatWork SMS alarm

HW3600 - English

**ALARM 1, DIESEL ALARM:**

Low diesel level in HW machine, refill tank with 25 litres.

**ALARM 2, BURNER ALARM:**

Burner on HW machine has stopped. Reset relay on burner.

**ALARM 3, MAINS VOLTAGE:**

Mains voltage on HW machine has been lost. Inspect input cable, check fuses and unit.

**ALARM 4, GLYCOL LEVEL:**

The HW machine has stopped due to excessively low HTF level. Check for any leaks on the thawing hoses. Repair and top up fluid.

**ALARM 5, BURNER:**

Burner on HW machine has stopped. Reset overheating fuse on electrical cabinet.

HW X2– English

**ALARM 1, DIESEL ALARM:**

Low diesel level in HW machine, refill tank with 25 litres.

**ALARM 2, BURNER ALARM:**

Burner 1 on HW machine has stopped. Reset relay on burner.

**ALARM 3, MAINS VOLTAGE:**

Mains voltage 1 has been lost on HW machine. Inspect input cable, check fuses and unit.

**ALARM 4, GLYCOL LEVEL:**

The HW machine has stopped due to excessively low HTF level 1 or 2. Check for any leaks on the thawing hoses. Repair and top up fluid.

**ALARM 5, BURNER ALARM:**

Burner 2 on HW machine has stopped. Reset relay on burner.

**ALARM 6, MAINS VOLTAGE:**

Mains voltage 2 on HW machine has been lost. Inspect input cable, check fuses and unit.